


Removal

- 1 Unlock sliding roof and remove trough.
- 2 With sliding roof 3/4 open, loosen sliding roof headlining and pull out in upward direction.
- 3 Open sliding roof completely and remove slide rail (1) left and right.
- 4 Remove sliding roof in upward direction.

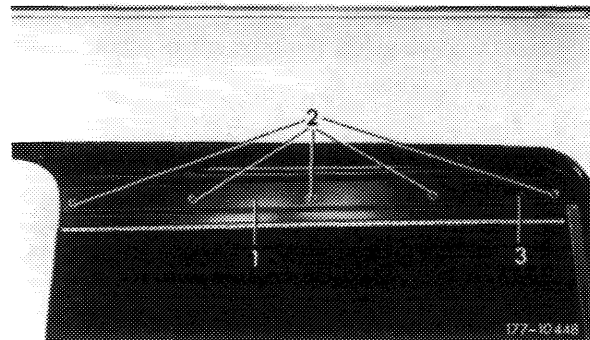

Installation

- 5 Prior to installation, thoroughly grease all sliding shoes, as well as the slide rails up to rear end with Anticorit PRC II by means of a piece of felt attached to an extension or by means of a brush.
- 6 Introduce sliding roof from above and install slide rails (1).
- 7 Attach closing lever to permit operation of sliding roof.
- 8 Adjust sliding roof free of play, that is, the sliding shoes should abut front and rear and the sliding roof should be seated accurately in center of cutout. Since the sliding roof frame has tolerances with regard to total width, the lateral clearance must be checked at several points. While checking, make sure that the sliding roof can be perfectly opened and closed.



9 Loosen the hex nuts (4) on both brake rods (5) and adjust sliding roof cover lengthwise in such a manner that the sliding roof is perfectly sealed at front edge.

10 With sliding roof half open, loosen the two screws (6) and uniformly adjust the two brake rods (5) on both sides, so that the sliding roof is seated in center of cutout. Make sure that the sliding roof can be locked in any position and that the closing lever can be operated in any position under normal effort.

11 Loosen screws (2) for slide rails (1).

12 Adjust both height adjustment screws front (3) on slide rails (1) in such a manner that the front edge of the closed sliding roof is 0–1 mm **lower** than the outer skin of the roof.

13 Then tighten screws for slide rails.

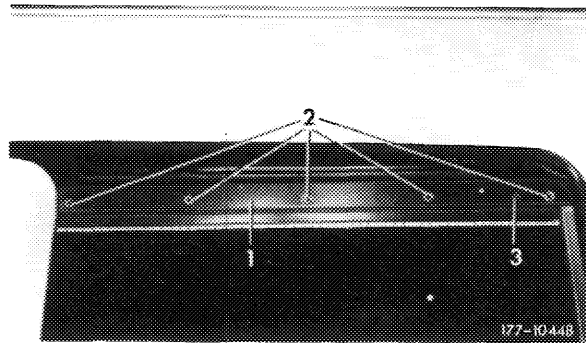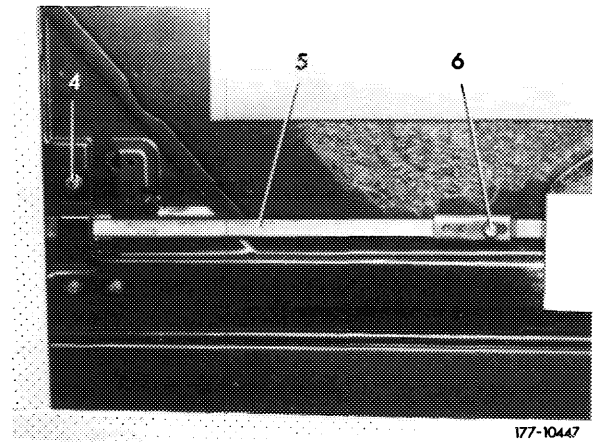

14 Adjust both height adjustment screws rear (7) so that the rear edge of the sliding roof cover is 0–1 mm **higher** than the outer skin of the roof.

15 Remove closing lever and install sliding roof head-lining.

16 Install trough and closing lever.

