

Removal


- 1 Run down crank operated window.
- 2 Press tumbler switch out of door liner and remove.
- 3 Remove door liner (72-101).
- 4 Remove plastic sheet.

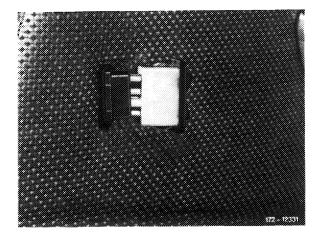

5 Disconnect electric wires at connector.

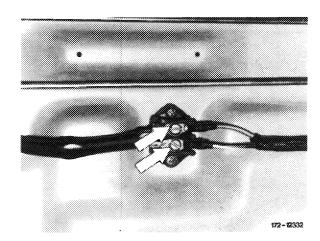


- 6 Remove both window lift rail screws.
- 7 Press up crank operated window and hold with a wedge.

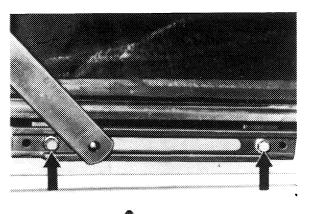


172 - 12333

- 8 Remove both nuts and screw on window lift.
- 9 Remove both screws on rear window running rail.

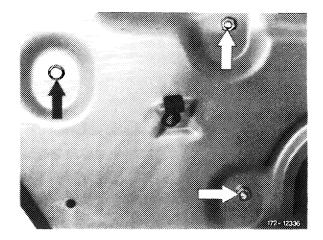


10 Press window running rail forward and remove window lift with motor downward.

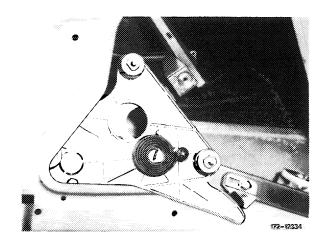

Installation

11 Install in reverse sequence. Electric wires of same color are connected with each other.

Note: Bottom stop is adjusted with screw (arrow) on window lift arm.

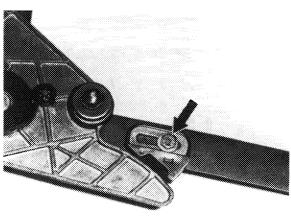

172 - 12336