
1st version front passenger seat

Removal


- 1 Slide passenger seat completely forward.
- 2 Loosen safety belt on outer end of seat.
- 3 Remove hex. screws (1) on both sides at rear and unscrew Philips head screws (2) on seat guide rail.
- 4 Slide passenger seat completely back.
- 5 Remove screws on both seat guide rails at front.

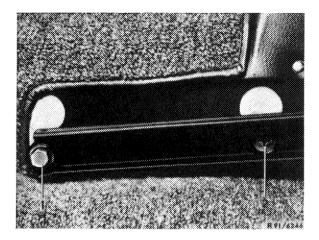

6 Pull vacuum hose from distributor (on model 107.02 only) and remove passenger seat.

Installation

7 For installation proceed vice versa.

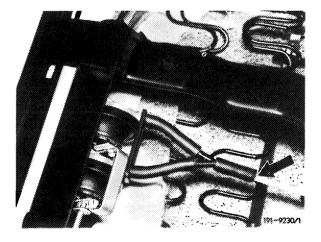

2nd version front passenger seat

Removal and installation are the same as on 2nd version driver's seat (91–100).