

72.1 Removal and Installation of Outside Door Handle

107

Data

Relief play between pull hook and door lock

1 mm

Removal

- 1 Unscrew the two screws (1).

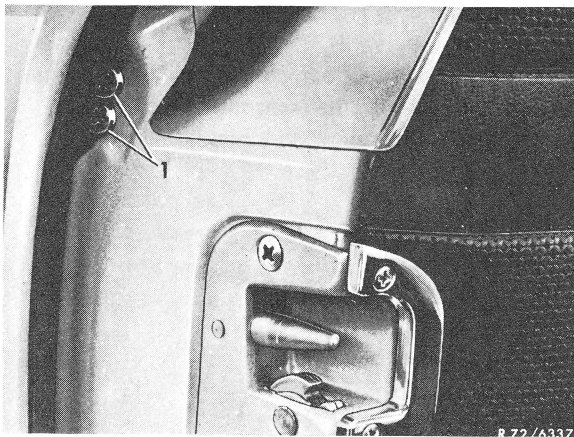


Fig. 1

1 Screws on door handle

- 2 Push door handle forward.

- 3 Pull grip and remove entire door handle.

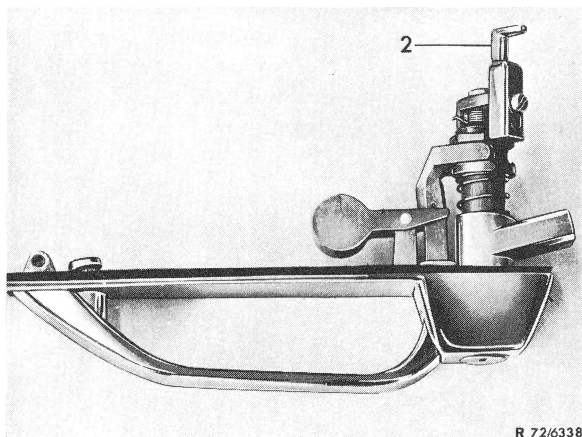


Fig. 2

2 Pull hook

Installation

- 4 Turn pull hook (2) on door handle upward (Fig. 2).

- 5 Insert door handle into door cutout as shown in Fig. 3.

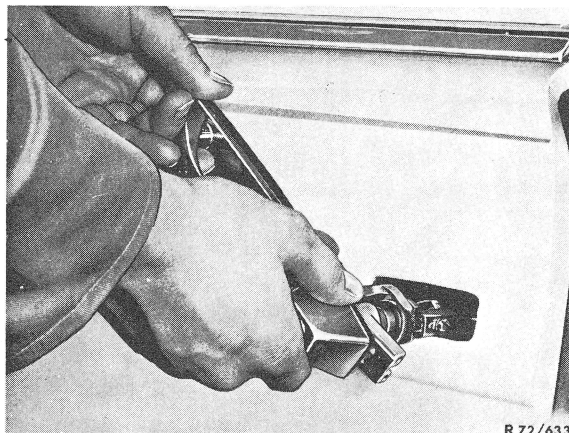


Fig. 3

- 6 Turn door handle into horizontal position and insert (Fig. 4).

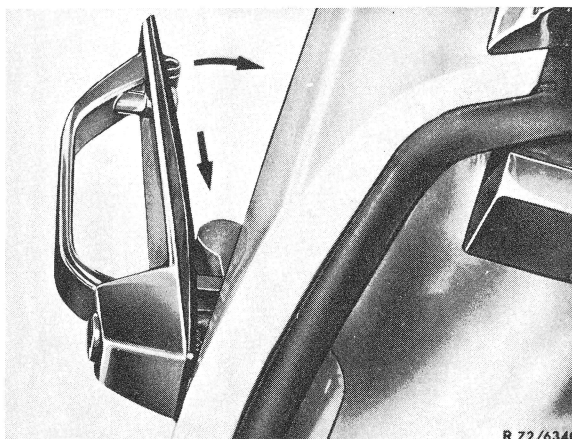


Fig. 4

- 7 Slide door handle toward rear and screw down.