

Data

Relief play between pull hook on door handle and door lock

1 mm

Removal

- 1 Remove door lining (72.1–100).
- 2 Loosen plastic sheeting in range of door lock.
- 3 Disconnect pull linkage on door lock.
- 4 Screw out the four screws for attaching lock.
- 5 Pull clip on door handle and remove door lock in downward direction.

Installation

- 6 Turn pull hook on door handle upwards.
- 7 Install door lock as shown in Fig. 1 while pushing lever (1) in direction of arrow.

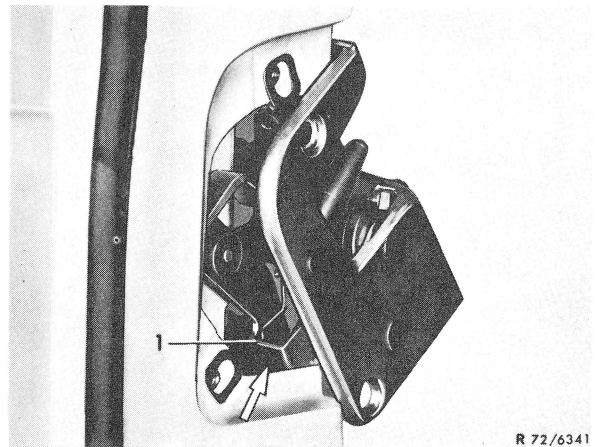


Fig. 1

1 Lever on door lock

Note: Coat latch and striker pin with **SHELL RETINAX G** and the inside of the lock with **CALYPSOL H 729**.