


A. Model 114, 115

**Removal**

- 1 Remove instrument cluster (54-250).
- 2 Unscrew both fastening nuts (21) and remove time clock.

**Installation**

- 3 For installation proceed vice versa. Make sure that contacts of time clock are inserted in contact spring.

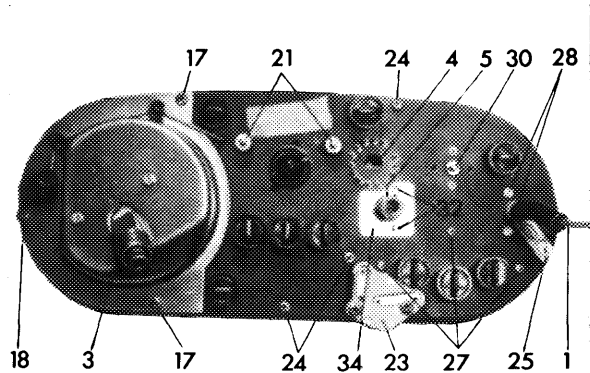


R-3502

B. Model 116

**Removal**

- 1 Remove instrument cluster (54-250).
- 2 Remove tachometer (54-253).
- 3 Unscrew fastening screws (2) and remove time clock.

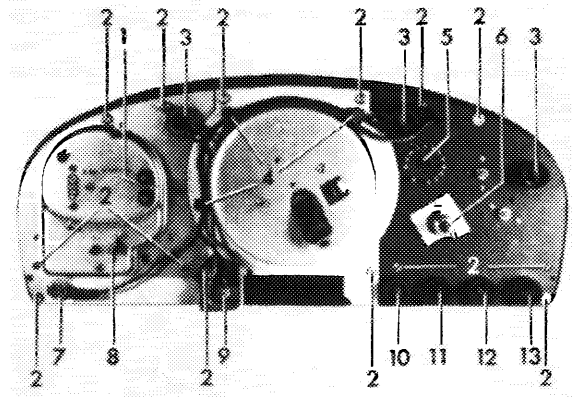


R-54/7793

**Installation**

- 4 For installation proceed vice versa.

Time clock and revolution counter removed

- 1 Base plate
- 2 Electrical connection revolution counter
- 3 Electrical connection time clock

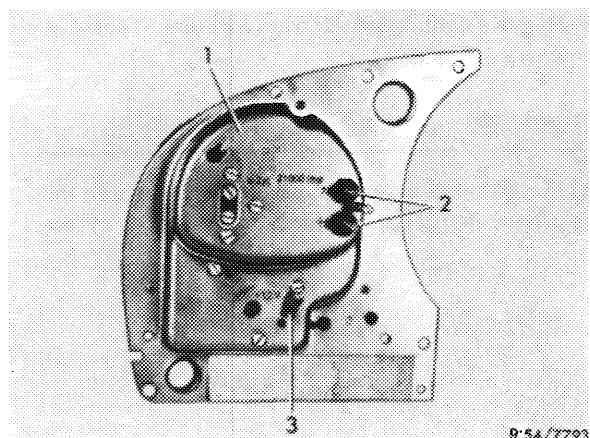

R-54/7793